

Manual

Thank you for purchasing the boAt Stone Ignite. You are now just a step away from the realm of pure audio bliss.

Allow this User Manual to guide your smooth sailing. Please note that playtime will vary depending on the selected volume level. You can stay plugged into the sound via Bluetooth wireless technology, USB, and Aux wire compatibility. This portable wireless speaker has been designed with a smooth interface that requires a minimum of effort.


PACKAGE CONTENTS

- 1 x Stone Ignite
- 1 x User Manual
- 1 x USB Type-C charging Cable
- 1 x Audio Cable
- 1 x Catalogue
- 1 x Warranty Card

PRODUCT OVERVIEW:

POWER ON/OFF:

Utilize the power switch to turn the speaker on or off. Note: Playtime varies according to the level of volume.

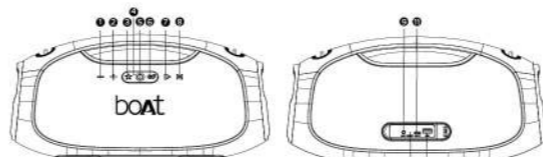

BASIC FUNCTIONS:

1. Previous Track/Volume Down: Long press the button to go to Previous Track and short press in steps to reduce the volume.
2. Next Track/Volume Up: Long press the button to go to the next track. Short press the '+' button in steps to increase the volume.
3. RGB Light: Short press the button to change the pattern of RGB lights or to turn it on/off.
4. Built-in Mic Hole: Speak over here while on a call when the speaker is connected with Bluetooth.
5. Power On/Off: Long press the on/off switch, LED light will start to flash. Once the speaker is connected with Bluetooth the LED light will stop blinking. Long press the button to turn it off.
6. Broadcast Button: Short press the button to connect with multiple Bluetooth devices. Use this button to unpair/disconnect Bluetooth.
7. Play/Pause: Short press the Play/Pause button to play or pause a track.
8. Mode Button: Short press the Mode button to switch among playing modes: BT (Bluetooth) / USB / AUX.

AUX MODE:

- Connect one end of the appropriate cable to the AUX input of the speaker and the other to the external device
 - When you use the audio cable to connect the device, it will auto-switch to the AUX mode.
- NOTE:** In AUX mode it is necessary to carry out the operation directly from the connected external device.

USB MODE:

- Insert a USB stick into the slot after turning on the speaker, playback will start automatically.
- Press the "Play/Pause" button to pause/resume playback.
 - Long press the "Next Track" / "Previous Track" buttons to skip to the next track/return to the previous track.
 - Press the "Play/Pause" button to pause/resume playback.
- Note:**
- Under any playing mode, when you insert a USB disk to the speaker, it will switch to the USB disk.
 - If you use a USB extension cable, the connected storage device may not be recognized or function properly.

POWER BANK FUNCTION:

- Turn the speaker on.
 - Connect other devices to the 5V/1A out port via a charging cable.
- Note:** Due to limited battery size it is suggested that power bank function should be used only in case of emergencies

RESET FUNCTIONALITY:

Insert an insulated pointed object (eg-a toothpick or a pin) into the Reset jack to perform the factory reset and restore the default speaker settings. Long press the Play/Pause button for 5 seconds, the speaker will turn off and clear the Bluetooth memory.

9. AUX socket: Connect the AUX cable here.
10. Reset Jack: Insert a pin (pointed object) over here to reset the speaker
11. Type-C Charging: Connect the Type-C charger over here.
12. USB socket/Power bank socket: Insert the USB in this slot.

SPECIFICATIONS

Bluetooth Version	V5.3
Dimension	377* 157 (W)*180 (H) mm
Weight	2.9 kg
Working Range	15m
Driver Size	1.5 inch Tweeter/ 3inch Subwoofer
Compatibility	AUX, USB, Bluetooth
Frequency	80HZ-20KHZ
Input Voltage	DC 5V/2A
Output Power	60W (RMS Power)
Charging Time	4-6 Hours
Playing Time	Up to 5 hours with RGB on (at 60% volume)
Battery	5400 mAh @ 7.4V

OPERATING INSTRUCTIONS

EQ MODE:

The speaker offers 2 kinds of sound effects, long-press the MODE button to change the EQ modes.

RGB LIGHT:

The RGB light is on when the speaker is powered on, short-press the RGB Light button to turn on the three different light modes and to turn it off.

ACTIVATING VOICE ASSISTANT:

- Connect with mobile's Bluetooth.
- Long-press the Play/Pause button for 2-3 seconds to activate the voice assistant.

Front

Back

HANDS-FREE CALL:

- Under Bluetooth connection status, if there is an incoming call, the user can short-press the Play/Pause button to accept the call or long-press Play/Pause button to reject the call.
- During the call, the user can long-press Play/Pause button for 2-3 seconds to switch to talking on the phone.
- Short press the Play/Pause button or operate on the mobile phone to end the call.

BROADCAST FUNCTION:

Turn on the multiple Stone Ignites that you require to be forged into one, both under Bluetooth mode. You only need to set one of the multiple units and follow the below steps.

Steps	Operation/Status		Power Indicator (white LED)		Multiple Link indicator (white LED)	
1	Master Speaker	Turn on and connect to external devices (connected to smartphone /USB player /AUX player). Short-Press "Multiple Link" button to make it ready for Multiple Link connection of Slave Speakers.	Master Speaker	Lighting constantly	Master Speaker	Lighting constantly
2	Slave Speakers (infinite quantity)	Turn on and make it in BT disconnected state. Short-Press "Multiple Link" button to search Master Speaker, it will automatically start to get connected by Multiple Link.	Slave Speakers	Blink slowly	Slave Speakers	Lighting constantly if Slave Speaker connected successfully.
			Slave Speakers	Blink slowly	Slave Speakers	Light off if Slave Speaker fail to connect in 1 minute.

Steps	Operation/Status		Power Indicator (white LED)		Multiple Link indicator (white LED)	
3	Master Speaker	Short-Press "Multiple Link" button to exit the Multiple Link state.	Master Speaker	Blink slowly (but if it was still connected to your smartphone, then indicator would light constantly)	Master Speaker	Light off
			Slave Speakers	Blink slowly	Slave Speakers	Blink slowly (searching status), then light off if fail to connect to master speaker in one minute.
4	Slave Speakers	Short-Press "Multiple Link" button to exit the Multiple Link state.	Master Speaker	Lighting constantly	Master Speaker	Lighting constantly
			Slave Speakers	Blink slowly	Slave Speakers	Light off

BLUETOOTH CONNECTIVITY:

- Turn the speaker on. The speaker will enter Bluetooth mode automatically.
- Activate the phone's Bluetooth functionality and search for the name "Stone Ignite" and choose it to carry out the Bluetooth pairing.
- Once paired, you can start playback from the external Bluetooth device.
- During music playback, you can long-press the Next Track/Previous Track button to select songs and short-press the button to adjust the volume.
- You can briefly press the Play/Pause button to pause playback. To resume playback, press the Play/Pause button again.
- Long-press the "Broadcast" Button to disconnect the Bluetooth connection with the mobile device.

Note: If your smartphone is disconnected from the speaker due to shut down or switching mode, the speaker will automatically reconnect your smartphone when it is turned on again or switch back to Bluetooth mode.

Note: If the speaker doesn't turn off or doesn't respond properly, you could use the Reset functionality.

CHARGING:

- When the battery is low, the speaker will make a prompt sound, and the red LED indicator will start to blink.
 - The charger adaptor is not included in the package, please charge this speaker via a 5V/2A charger or via PC. A Fast charger of 9V/3A is supported as well. During charging, the LED indicator stays solid red; once the charging gets completed the indicator turns off (the device will fully recharge in about 4-6 hours).
- Note:**
- Please don't use the speaker while it is in charging as it may decrease the battery's performance.
 - If the battery is completely discharged, speaker may restart leave it off and recharge it for at least an hour before using it.
 - Battery life (up to 4 hours with use at medium volume and RGB light) may vary depending on the listening volume, based on the type of song being played, depending on the selected source, whether the RGB lights are used, and the state of wear of the battery.
 - When the battery is low, the speaker will periodically emit a warning tone.

WARNING:

- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to rain or moisture environment.
- Please do not disassemble, repair or modify this product by yourself without authorization.
- When cleaning this product, please use a soft cloth or with little water if needed, please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.
- The product is with built-in lithium battery, to avoid dangers, please do not discard or put it in the fire.